



1. Front Body (Front Body, installation on the outside of the door)

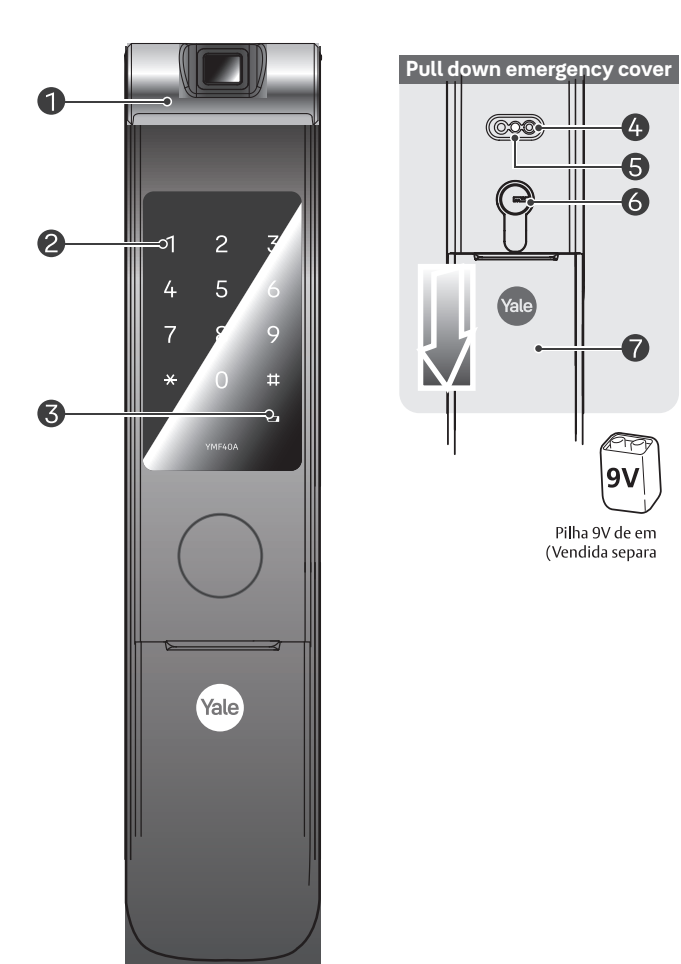

2. Basic Contents

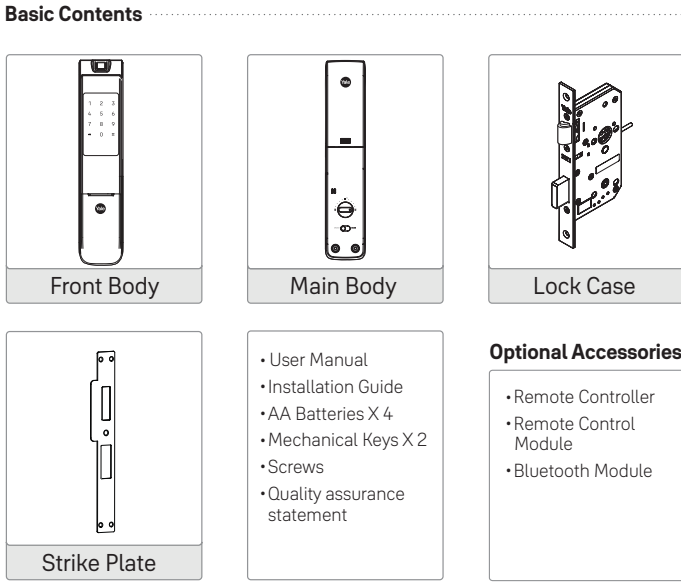


3. Specifications

Parts	Specifications	Remarks
Front Body	66(W) X 320(H) X 25(D) mm, Zinc die-casting	Operating temperature -15~55°C(5~131 ° F)
Main Body	66(W) X 320(H) X 31(D) mm, Fiber-glass	
Works for	4EA 1.5V AA Alkaline batteries(Operating voltage: 4.5~6V)	
Optional product	Remote controller: wireless	

* Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of battery used.

4. Main Body (Main Body, installation on the inside of the door)

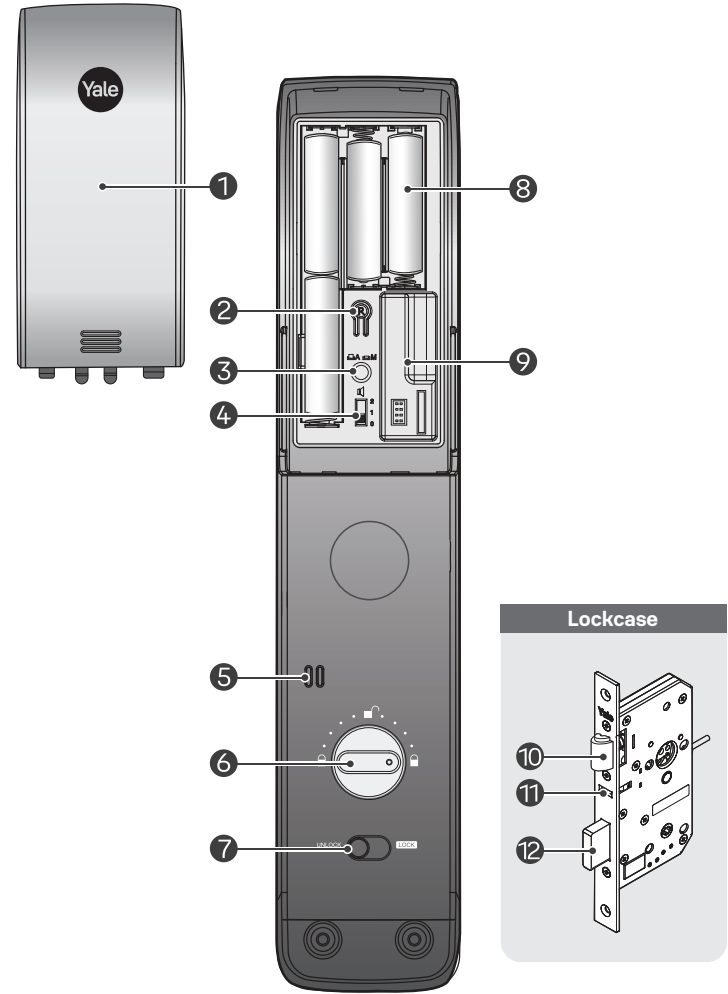

5. Front Body

1	Fingerprint Module
2	keypad (10-key)
3	Low Battery Indicator
4	5 Emergency Power Supply Terminal
5	Reset button
6	Emergency Mechanical Key Slot
7	Emergency cover

6. Main Body

1	Battery Cover
2	® Registration Button
3	Automatic / Manual Lock Button
4	Volume Control Switch
5	Speaker
6	Thumb Turn Knob
7	Internal Forced Lock Switch
8	1.5V AA Alkaline Batteries (4PCS)
9	Module Accessory Slot (Optional)
10	Latch Bolt
11	Automatic Locking Sensor
12	Dead Bolt

7. Setting Menu

Master Mode: Only a designated person who knows 'Master PIN Code' has authority to set features.

Normal Mode: If no user is assigned with master code without a designated person, anyone who knows 'User PIN Code' has authority to set features.

Visitor Code: Users with Visitor Code can only open the door with no access to change settings.

Onetime Code: The onetime code is used only once for unlocking the door lock and automatically deleted after usage.

User Slot Number: It should be 2 digits(like '01', '02'...'99', '00') and available in advanced mode.

	Touch the Keypad of the Front Body with your palm to begin
	Press button on the Keypad
	Press button on the Keypad
	Press (Registration) button in every steps to start or complete the session
	Enter User Fingerprint (Up to 100 Users)
	Enter User Code (4 ~ 10 digits)
	Enter Master Code (4 ~ 10 digits)
	Enter Visitor Code (Only 4 digits)
	Enter Onetime Code (Only 4 digits)
	User Slot Number should be 2 digits (like '01' ... '99' and '00': Location of 100th user slot must be assigned "00" instead of "100".)
	Rotation area to add more features

8. Product Features

One Touch Fingerprint Access
Secure one Touch Live fingerprint detection for personalized access. Unique Sensor not only provides high security but faster unlocking experience as well.

Yale Access App
Yale Access gives you the peace of mind of knowing who and what you love is safe - no matter where you are- just at the touch of your smartphone.

Smart Touchpad – Auto Lock
The door Locks when you touch the palm on the keypad.

3 minute Lock Out Feature
After five (5) unsuccessful attempts of an invalid code or fingerprint, lock out mode is activated for 3 minutes.

Smart Etiquette
When entering a pin code on the keypad, the user can open the door lock in silent mode.

Fake PIN Code
Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.

Internal Forced Lock
It is a security-enhancing function that 'disables' authentication methods such as passwords and fingerprints from outside when setting up functions indoors.

External Forced Lock
It is a security-enhancing function that an alarm goes off if someone opens door from inside when setting up functions outside.

Voice Guidance
It guides you through the operation status on how to enable various features & settings- mode for easier and more convenient use.


Other features and Benefits
• Remote Controller (Optional):
This option may not be available depending on your country or local dealer.
• Network Module/Controller (Optional):
It allows door lock to connect with Home network controller.
• Intrusion/Broken Alarm.
• Low Battery Alarm and Emergency Power Supply.

9. Normal Mode (Default Mode)


Normal mode is for convenient mode for anyone with user code to change various settings.

1	12 (Registration process)				* Continue / ① Complete							
	1	2	3	4	5	6	7	8	9	10	11	12
User Code												Only 1 User
Registration	①	U PIN CODE New	①									
Fingerprint												Up to 100 Users
Registration	①	*	👉 8times	*	OR	①						
Visitor Code												Only 1 User
Registration	U PIN CODE	①	1	#	1	#	V PIN CODE	#	*	OR	①	
Delete					3	#	U PIN CODE	#	*	OR	①	
Onetime Code												Only 1 User, Automatically deleted after use
Registration	U PIN CODE	①	2	#	1	#	0 PIN CODE	#	*	OR	①	
Delete					3	#	U PIN CODE	#	*	OR	①	
Delete all fingerprint credentials												
Delete	U PIN CODE	①	3	#	U PIN CODE	#	*	OR	①			


10. Unlocking Door with Code

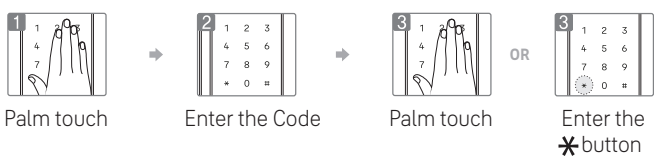


11. Unlocking Door with Fingerprint

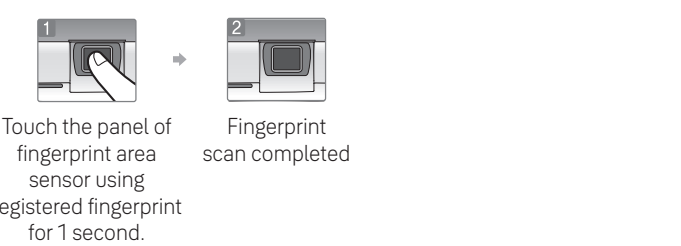

 
12. Opening Door(Inside/Outside)



13. Unlocking Door with Smart Etiquette

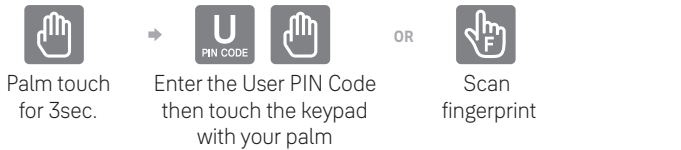

14. Locking the Door(Inside/Outside)

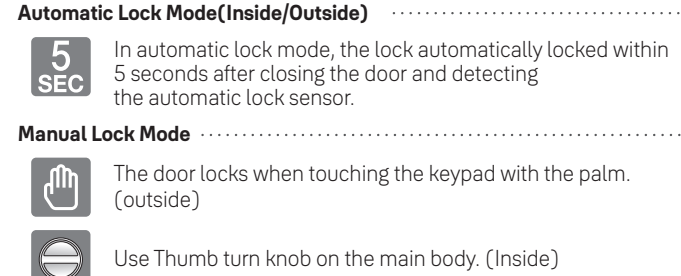

15. Automatic/Manual Lock

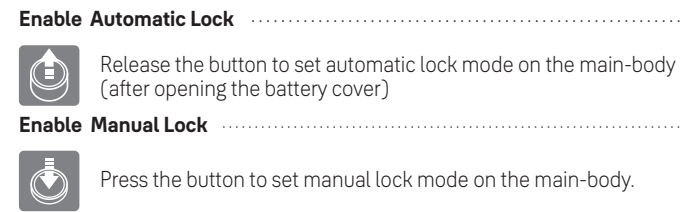


Diagram illustrating the authentication process:

- Method 1:** Palm touch → Enter the user code and fake code (3-digit user code, 3-digit fake code).
- Method 2:** Enter the Fake Code and User code (3-digit fake code, 3-digit user code) → Palm touch.

Enable External Forced Lock : Fingerprint

 Scan with registered Fingerprint and hold the fingerprint area until you hear 3 beep sounds.

Palm touch Enter the User PIN Code Enter the # button for 5 Sec.

When the door is unlocked from outside based upon proper authentication, the External forced lock will be released.

OR

Contact 9V battery Palm touch Enter the User Code and Plam touch Scan fingerprint

One-on-one real life size
1.5V(LR6) Alkaline AA Battery

It may sustain 1 year if used 10 times a day. (Users are advised to use authentic Alkaline batteries.)
* Kindly dispose used batteries.

- * The Low Battery LED on keypad flickers red.
- * When low battery notification message is played.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE NATIONAL CODE OR RECYCLING PROGRAM.

Master mode is a mode in which only the administrator can set the door lock and provide access to other users. 100 users passwords, 100 users fingerprint and individual registration and deletion of one-time passwords enable efficient management of visitors.

UN User Slot Number should be 2 digits.
like '01' ... '99' and '00': Location of 100th user slot must be assigned "00" instead of "100".

Do not install the digital door lock in an outdoor environment.

Do not attempt to disassemble the digital door lock by yourself.

Do not spray water directly or wipe with chemicals such as benzene, gasoline or alcohol.

Do not use force with a tool onto the product.

When using, remember that someone else can see the password.

Make sure the door is closed properly when going out.

The operation sound volume will be adjusted according to the Volume Switch setting.

0 1 2 : High

0 1 2 : Low

0 1 2 : Mute

A diagram of the refrigerator's top panel. It shows a control panel with several buttons and a digital display. A dashed circle highlights a specific button labeled 'VOLUME' with a speaker icon, indicating the Volume Switch. Below the panel, a small speaker grille is visible.

All access mode from the external side are disabled for 3 minutes to deter unauthorized access.

- Open with inside door bar.
- Open the door with mechanical key.
- Press **I** button.

Intrusion Alarm : The alarm goes off when someone forces the door open.
For example, In case of an intrusion by opening a gap in the door while the door is locked.

Broken Alarm(Breakage Alarm) : The alarm goes off when the front part is completely separated from the main set. For example, forced removal of external product (front body).

- Enter the registered User code.
- Press **(I)** button for 5 seconds.
- Enter the registered Fingerprint.

Digital Lock Yale YMF 40A RL OMM 20240401 (2 of 2)

[illegible]

- ※ Voice guidance :Voice guidance features assist in easy navigation through various features.
- ※ All registered passwords and other credentials will be deleted when mode is changed.
- ※ Please install(register) the network module when you want to use a remote control or home network.

Do not install the digital door lock in an outdoor environment.

Do not attempt to disassemble the digital door lock by your self.

By doing so, you may get an electronic shock and damage the product.

Do not use force with a tool onto the product.

Make sure to lock the door tight when you go out.

Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.

It is recommended to change User Code on a regular basis.

In manual lock mode, make sure to double check whether the door is securely locked.

When External Forced lock is set and unlock the door, the alarm will be activated.

Do not use rechargeable batteries. Only alkaline batteries are recommended.

Make sure to follow the above instructions to avoid any injuries.

It cannot be guaranteed in a special conditions & environment such as water condensation, seaside.

Warranty will not cover- exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles.



PLEASE READ INSTRUCTIONS BEFORE USE.
The functions and design of this product can be changed
without prior notice for performance and quality improvement.

